


Loading SonarMite Drivers to Trimble Access


1) Copy the two SonarMite ESD files to Trimble Access 'System' directory

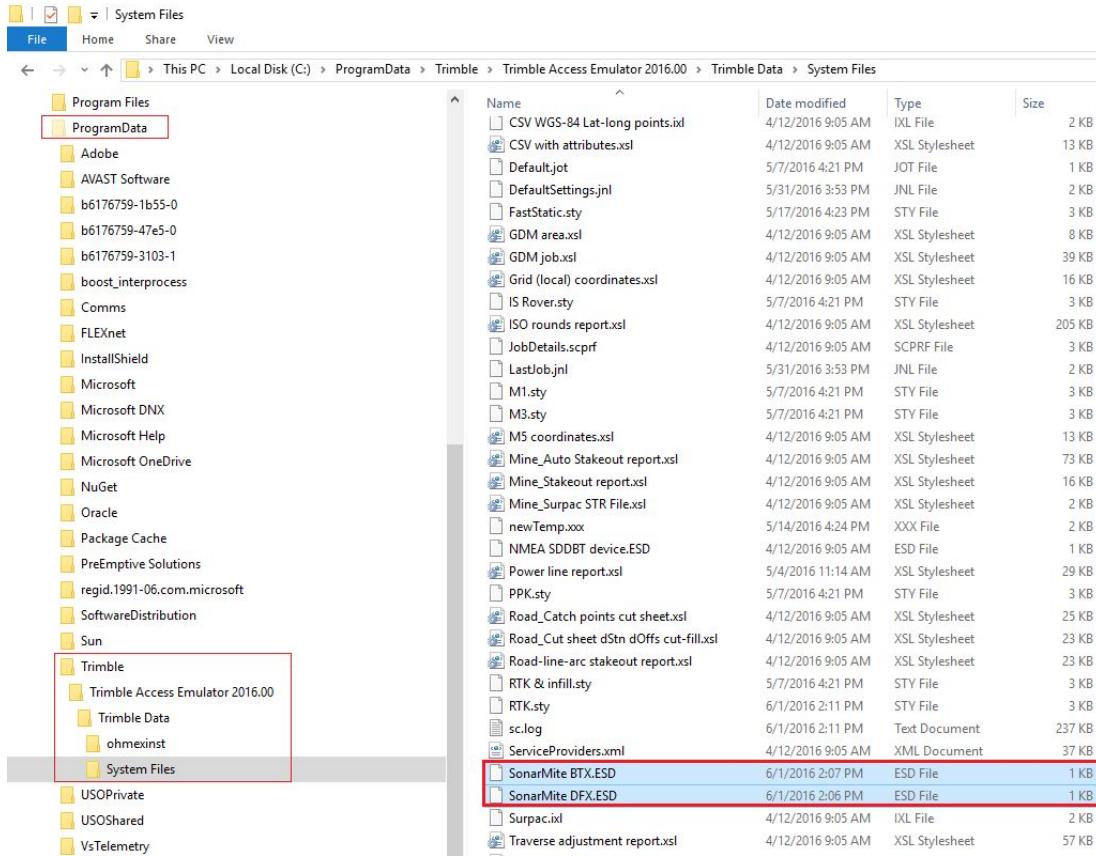

2) In Trimble Access menu screen select SETTINGS




3) In the Settings Menu screen choose SURVEY STYLES

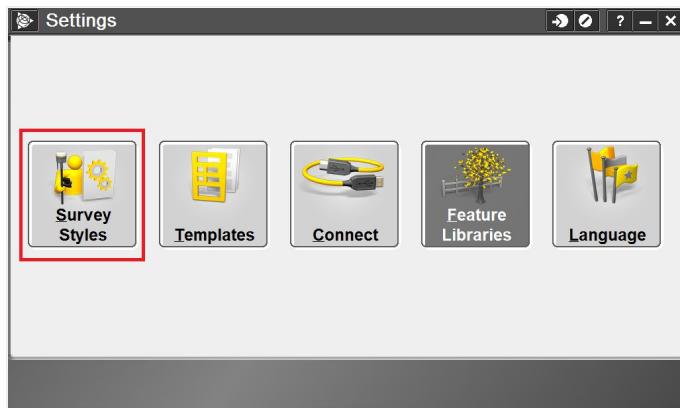


4) in the Styles screen select a style

Name	Size	Modified	Location
FastStatic	2kb	5/17/2016	C:\ProgramData\Trimble\Trimble A...
PPK	2kb	5/7/2016	C:\ProgramData\Trimble\Trimble A...
RTK	2kb	6/1/2016	C:\ProgramData\Trimble\Trimble A...
RTK & infill	2kb	5/7/2016	C:\ProgramData\Trimble\Trimble A...

5) Within the Style properties select ECHO SOUNDER

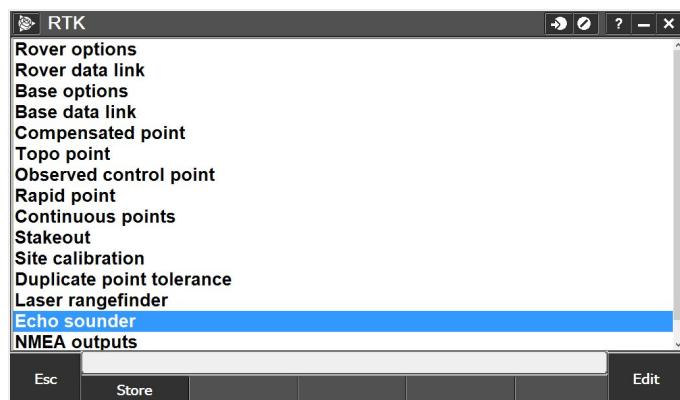

6) In E/S screen select type and the SonarMites will appear

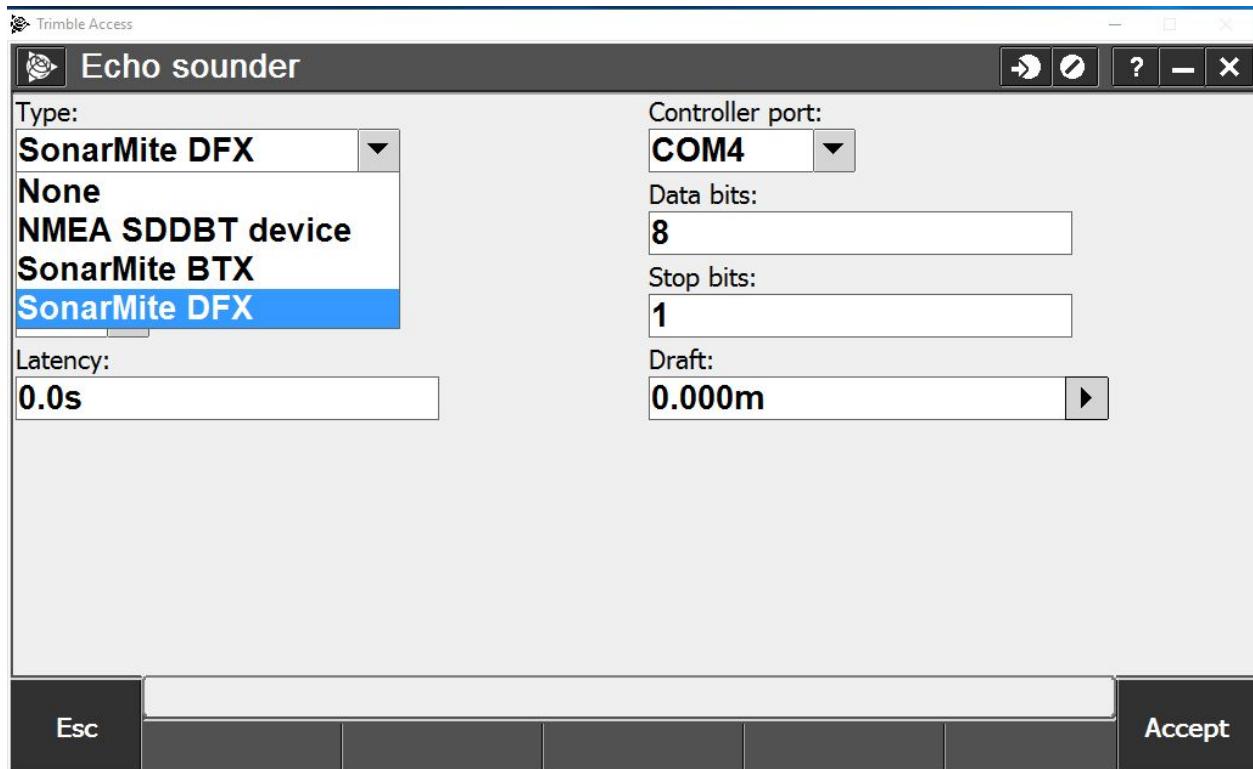

7) Select required Echo Sounder configure then ACCEPT and STORE